

Special Information

BULLETIN

MAY/99

PAGE 1/1

SUBJECT

NAVISTAR

DT466 and DT530 Navistar Engines consist of three different types of fuel control.

1. Mechanical fuel control - consult Pacbrake schematic L5104 or L5105
2. Electronic fuel control prior to Navpak - consult Pacbrake schematic L5102 or L5103
3. Navpak electronic fuel control - consult Pacbrake schematics L5140 through L5147

The Navistar DT466E and DT530E electronic engines are not exhaust brake ready. A Navistar dealer must enable the engine brake circuit. There may be a charge for this service by the Navistar dealer. Please advise all customers inquiring about these applications. They must determine if this service is required prior to installing an exhaust brake.

Should you require further information please contact Pacbrake Service at 800-663-0096.

Pacbrake Service

PACBRAKE
ENGINE & EXHAUST BRAKES