

Installation

PROCEDURES

PAGE 1/1

SUBJECT

C14005 HEADER PIPE GROUP

APPLICATION

1988 - 1993 DODGE/CUMMINS


This header pipe replaces the stock header pipe from the turbo to intermediate pipe on 1988 - 1993 Dodge trucks when C14000 Pacbrake is installed.

Contains:

1	-	C11840	EXHAUST PIPE 1988 - 1993
2	-	C11846	M10X50 CAPSCREWS
1	-	C11847	3" BAND CLAMP
1	-	C11913	ALTERNATE THROTTLE SWITCH BRACKET

Installation Procedures

1. From the underside of the truck, remove the U-bolt clamp as shown by arrow in photo. With a reciprocating saw or similar cutting tool, cut the pipe through the indentation left by the clamp. Remove and save hanger clamp. Remove and save rear turbo clamp. Remove and discard pipe. It is not necessary to remove the short section of header pipe that remains lodged in the front of the intermediate pipe, as the new pipe will not interfere. Check the sealing face of the turbo for carbon or imperfections.
2. Return to step 3 in the installation instruction manual.
3. Install the new header pipe, using the mounting flange and bolts provided. Assemble loosely at this point.

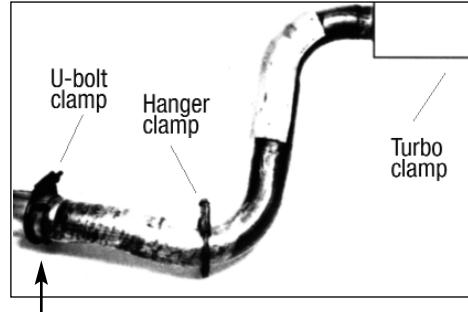

NOTE: Some trimming may be necessary to provide close mating prior to installation of clamp.

Torque turbo "V" clamp to 72 in. lbs. (6 ft. lbs.) Torque capscrews alternately to 25 ft. lbs. Torque band clamp bolts alternately to 60 ft.lbs. Re-install factory hangers.

Pacbrake Service

PACBRAKE[®]
ENGINE & EXHAUST BRAKES

Phone: 800-663-0096 • Fax: 604-882-9278 • E-mail: info@pacbrake.com • Internet: www.pacbrake.com
Canada: 19594 - 96 Ave., Surrey, BC V4N 4C3 • USA: P.O. Box 1822, 250 H St, Blaine, WA 98231-1822

L2013