


PACBRAKE EXHAUST BRAKE WIRING SCHEMATIC FOR:

CUMMINS ISM

For vehicles (without) Allison WT Transmission (with) ABS braking (with) on-board air system

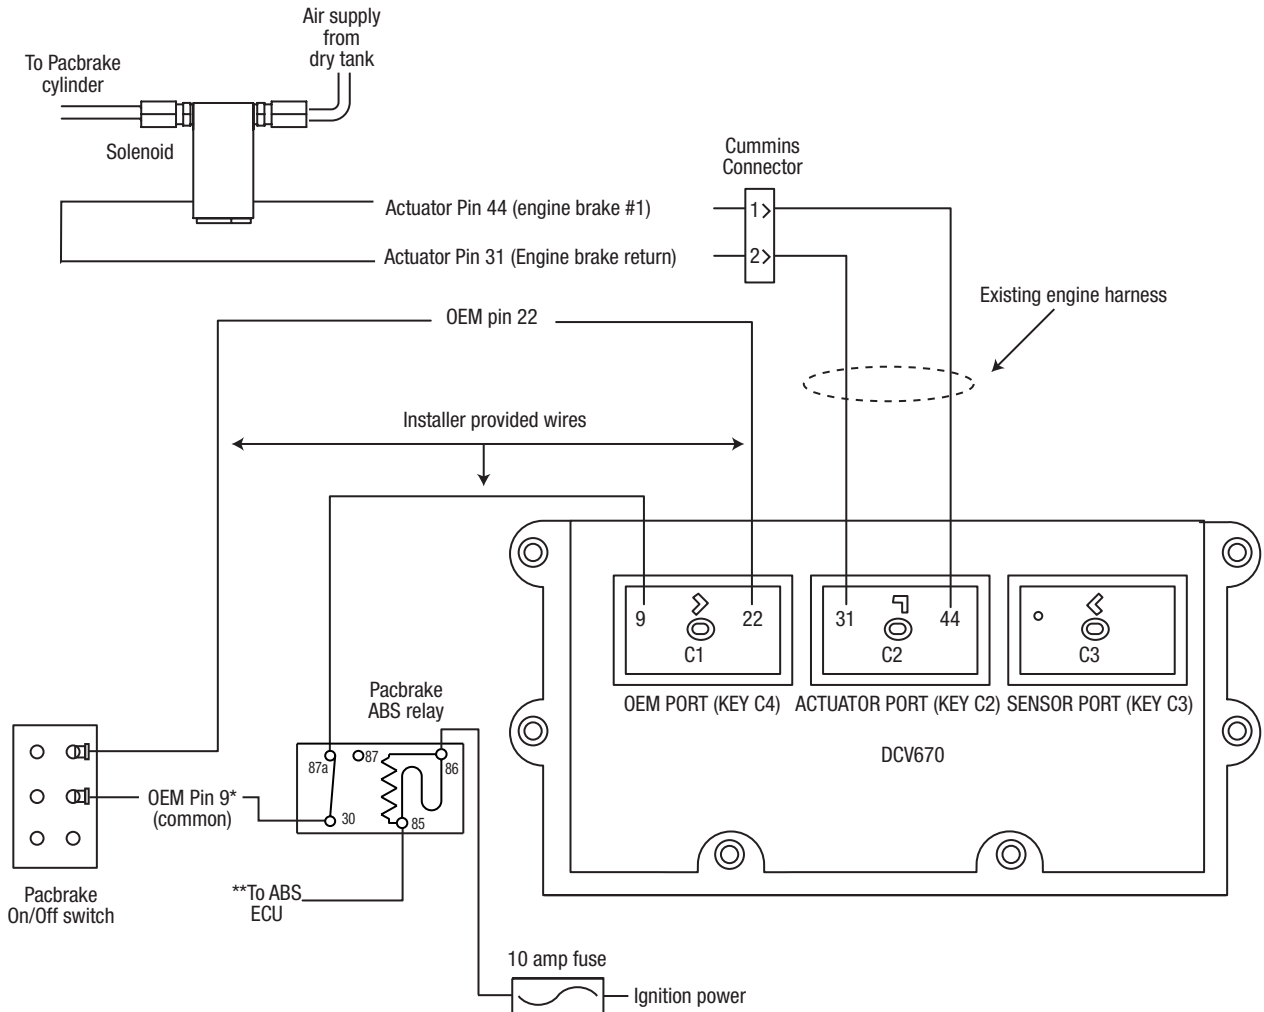

NOTE:

- *Pin 10 or 19 can be used as alternates to Pin 9 for common ground.
- OEM port pin #9 to on/off switch.
- OEM port pin #22 from on/off switch.
- Actuator port pin #44 to Pacbrake solenoid (either wire at solenoid).
- Actuator port pin #31 to Pacbrake solenoid (remaining wire at solenoid).
- **Connection at ABS ECU depends on ABS manufacturer. Consult VOEM.
- Vehicles without ABS disregard ABS relay installation.
- Relay shown is de-energized.
- Information for this schematic was derived from vehicle systems at the date of this printing.
- Updates or variations by vehicle manufacturers constituting changes will not be the responsibility of Pacbrake.

